

Fastcorp LLC Vendor Quick Start Guide

- Inspect your machine for any shipping damage.
- Use a pair of Channel Locks or Wrench to adjust the 4 leveling legs until machine is level.
- Remove all shipping Ty-Wraps and then ensure robot is free to move and freezer lid opens.

- If you are adding currency systems to the machine install them at this time with the power OFF

- Undo cord from back of machine and plug into 15A dedicated wall outlet.
- The main power switch is located behind or to the left of the freezer – Switch to ON
- The controller power switch is under the delivery bin – Switch it on at this time.
- The machine display is mounted on a hinged plate. Pull it from inside the door to view from inside the cabinet where the keypads are located.
- When the machine powers up you should see menu #1 “Change Price”
- Press the “VAC” button to unlock the keypads for programming.
- Use the * key to scroll to menu #7 and verify your time and date.
- Scroll to menu #13 and verify your health sensor is set correctly for your product

- If your machine was pre-Programmed from the factory you should scroll to menu #22 “Verify All Bins” This menu option will move the robot to each programmed location. If you see the location needs adjustment move the robot by hand into position and then press # to save and it will automatically go to next selection until you see “Selection Not Found”
- If your machine is not pre-programmed you should use menu #4 “Create Selection” to start programming. See manual for details.

- Free vend can be used to test the machine operation. Press “Free Vend” then pull door switch out. The display should read “Free Vend Mode”. Make any selection and watch for operation. NOTE: since door is open you will need to be ready to catch your product in hand.

- It is important to vend 1 selection in a tall bin and 1 selection in a short bin until the controller believes the bin is empty. There should be 1 or 2 products left. If there are more you can go back to service menu # 21 “Up / Down Travel Limits” and adjust this. One setting for all the tall bins and one for all the short bins. Make the number larger to move the hose deeper into the bin. Try the vend again and repeat the process until you have the desired depth.

- Don’t forget to turn “Free Vend” off and close the display door for customer operation. When closing the main door tighten the T handle until display reads “Please Insert Money” and then another turn before locking. Your machine is ready to run.

If you have any questions please call Technical Support. 888-441-3278 Option #3